



**FilmFastener LLC**  
- Featuring *BondKap™*

security film  
anchoring system  
*patent pending*


813.926.8721

WWW.FILMFASTENER.COM


WWW.BONDKAP.COM

## Installation guide for commercial storefront


1. Measure the window opening.
2. Mark the BondKap BK 2001 or BK 2004 to length using a wet erase marker and the corner template.

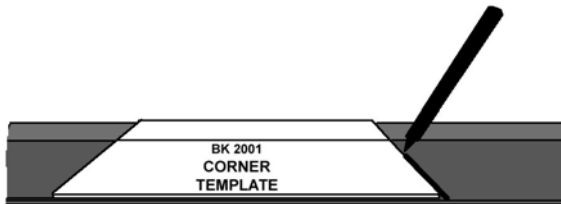


3. Cut the BondKap strips.
4. Clean the window frame and film of any residue.
5. Cut the tip of your caulking gun the width of the BondKap.

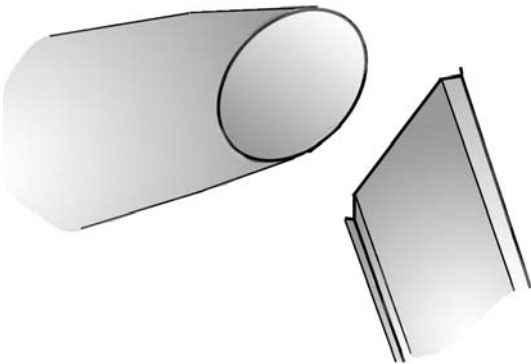

6. Apply the silicone to the window as described in techniques guide – free hand method.

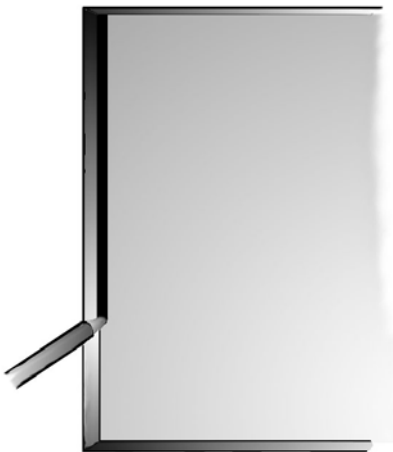

7. Try to maintain a triangular bead throughout the application. This will help to avoid squeeze out of the silicone.
8. Position and press the BondKap in place.

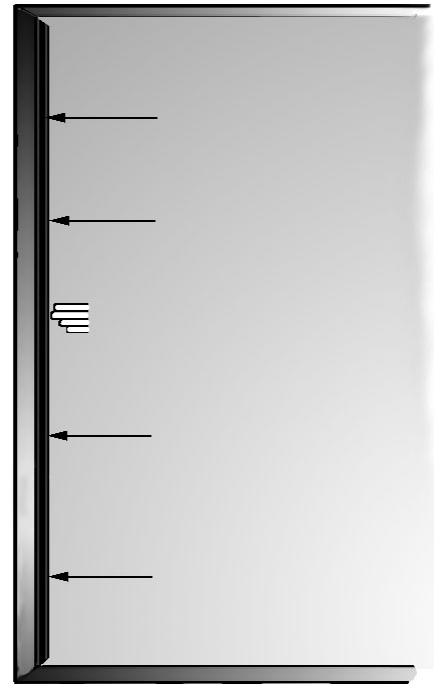

9. Press along the entire length of the BondKap to assure full contact. You should have very little silicone at the edge of the BondKap.
10. Repeat above process for the rest of the window sides.
11. Clean off any excess silicone with a plastic razor blade.
12. If you notice an area without any silicone either from looking from the outside or the BondKap feels loose. Pull up the BondKap enough where you can dispense more silicone into the void and press into place.